

Firmware Upgrade instructions for SIDEKICK

Upgrading your Sidekick to version 3 requires connecting the Sidekick to your computer via an ethernet cable and uploading new firmware. To perform this please follow these instructions.

Section 1

First you will need to download the latest firmware file from the website here:

https://www.ocens.com/sidekick#Downloads

Look for the firmware upgrade file link and save it to the downloads folder on your computer.

Section 2

Next you will need to configure your computers network settings:

Windows 10:

- In the Windows search bar at the bottom of your screen type in Settings and select the Settings App
- Then choose the Network & Internet option
- On the left side menu select Ethernet
- Then on the Right select Change adapter options
- Double click on the Ethernet connection
- On the Status window that pops up click on Properties
- Click on the line Internet Protocol Version 4 and then click on Properties (note the settings here so that you can reset them when we are finished)
- Choose: Use the following IP address and enter the following:

IP address: 192.168.1.2
 Subnet mask: 255.255.255.0
 Default gateway: 192.168.1.1

- Then click OK
- You can leave these windows open as you will come back to them to reset the settings.


Mac:

- Open System Preferences
- Select Network
- Select your Ethernet connection from the menu on the left (make a note of the current settings so that you can return them to the previous settings after this upgrade)
- Set Configure IPv4 to: Manually and enter the following:

Set IP Address: 192.168.1.2Set Subnet Mask: 255.255.255.0

Set Router: 192.168.1.1

Click Apply

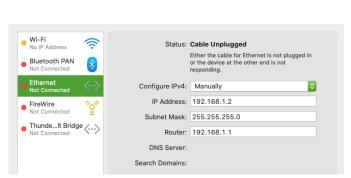

Int	ternet Protocol Version 4 (TCP/II	Pv4) Properties	>
G	General		
	You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.		
	Obtain an IP address automatically		
	Use the following IP address:		
	IP address:	192 . 168 . 1 . 2	
	Subnet mask:	255 . 255 . 255 . 0	
	Default gateway:	192 . 168 . 1 . 1	
	Obtain DNS server address automatically		
	Use the following DNS server addresses:		
	Preferred DNS server:		
	Alternate DNS server:		
	Validate settings upon exit	Advanced	

Section 3

- Now connect the ethernet cable between the computer and the WAN port on the SIDEKICK.
- Press and hold Reset button down on the side of the Sidekick while connecting the power cable to the Sidekick.
- The red light will flash on 6 times release button after the sixth flash (notice the lights flash quickly for just a moment when this happens)
- Your Sidekick should now just have the green Wireless light on solid –
 it is now in Firmware upgrade mode.

WAN LAN POWER USS RESEL

Section 4

On your computer:

- Open a web browser and enter the web address: 192.168.1.1
- If you get a "page not found" message, please review previous steps and start over.
- You will see a page allowing you to Select the firmware file that you have downloaded and then click Upgrade Firmware.
- Once the file is uploaded to the device (this happens quickly) it will take about 2 minutes for the upgrade to process in the Sidekick.

Section 5

- You will know it is complete when the red Ready light and the green Wireless lights are on full time.
- You can verify by resetting your computer settings and then moving the ethernet cable from the WAN port to the LAN port on the Sidekick.
- You should be able to login to the Sidekick webpage by pointing your browser to 192.168.8.1.
- Pleases follow the login steps on the screen.
- Once you are at the main screen you can look in the lower right of the window to confirm the Firmware version number.



