


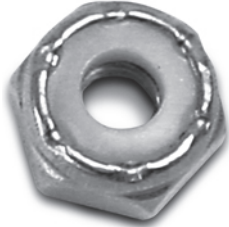



TracPhone® V30








Kitpack Contents List

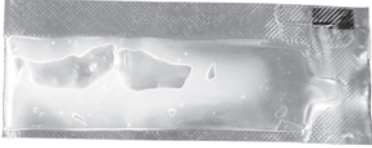


(KVH part no. 72-0929)

This kitpack contains various parts that will be needed to complete the installation. Ensure that the kitpack contains all of the items listed in the table below.

Part Name	Part Number	Quantity	Photo	✓
#10-32 x 3/8" screw (extra hardware)	14-0053-03N	3		
1/4" self-locking nut	14-0065-25	4		
1/4" flat washer	14-0132-08	4		
1/4"-20 x 3" hex bolt	14-0250-48	4		
1/4" flat wide washer	14-0251	4		

Part Name	Part Number	Quantity	Photo	✓
Plastic screw cap	19-0088	6		
Diagnostics phone	19-0683	1		
6" tie-wrap	22-0006	10		
Foam seal	24-0142	1		
RJ11 phone cable with ferrite, 25 ft (7.6 m)	32-1153-25	1		
Antenna cable, 50 ft (15 m)	32-1439-0050	1		
Anti-seize lubricant	60-0138	1		

Part Name	Part Number	Quantity	Photo	✓
Silicone grease	60-0146	2		

If any of the contents are missing, please contact KVH Technical Support:

<h2 style="margin: 0;">Technical Support</h2>
<p>1 866 701-7103 (Continental U.S.A.) +1 401 851-3806 (Worldwide) mvbsupport@kvh.com</p>

Packed by:
